


Using AnchorRescue with a Swivel

A spacer is required when using AnchorRescue with a swivel. An appropriate spacer is supplied with every AnchorRescue.

This spacer, placed between the swivel and the slider, allows the top half of the swivel and the connected anchor rode to rotate without catching on the slider and causing it to rotate also.

Depending on the swivel in use, the spacer may ride above the swivel or drop down over to top of the swivel. In the figure below, the swivel is small and the spacer has dropped down over the top. It could just as easily ride on top of the swivel.

Securing the tether with a cable tie is the same as when a swivel is not used. Leave enough slack for free movement of the swivel at the shank of the anchor.

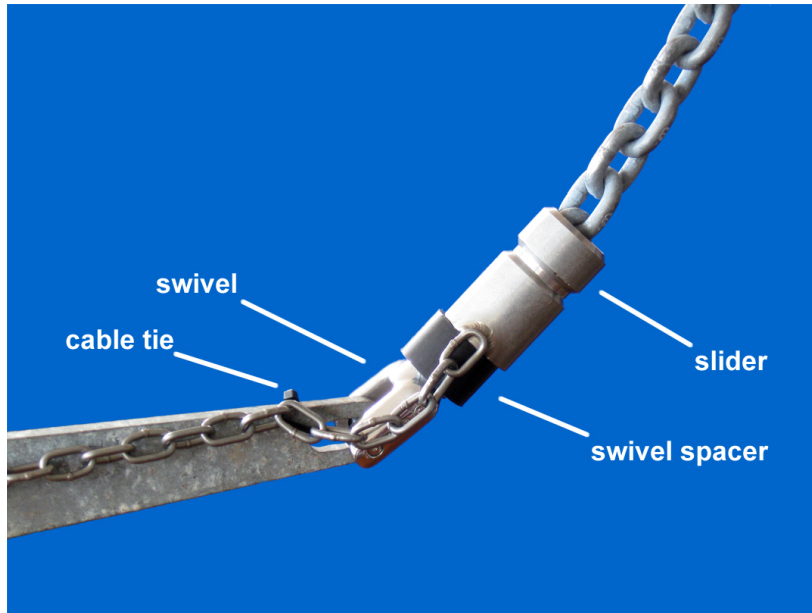

If you have misplaced the supplied spacer, we will supply a replacement for a nominal fee or you can make one out of a piece of schedule 80 plastic pipe. If you don't use UV protected pipe, keep an eye on degradation from the sun.

NOTE: When a swivel is installed, we do not recommend moving the slider up the rode unless the swivel is also moved up the rode to just below the slider.